

## SYSTEMFILE LOCK REMOVAL

Please take note of the orientation of the lock before removal for fitting of a new lock.

The Lock is held in position by a 2 pronged spring clip.


To remove the lock you will need a long flat screw driver.

Removal of the lock is as follows:

1. Picture 1 shows the lock spring holding the lock in position
2. Position the blade of the screw driver against the edge of the spring clip and with a swift push of the screw driver, the spring will become free from the lock. As shown in Picture 2
3. Picture 3 shows the spring clip moved from its seated position.
4. Picture 4 shows spring clip fully remove from its seated position and the lock ready to be removed.



Spring Clip

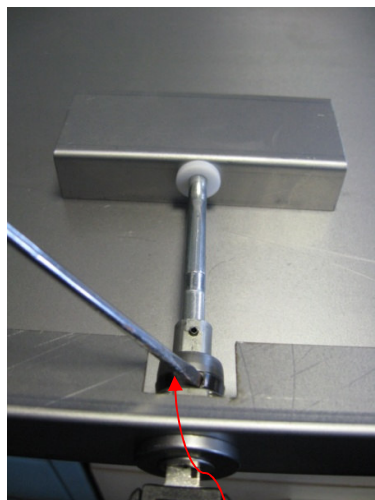

Screw driver held against  
the edge of the spring clip

