

Multi-drawers

**Home (CB5)**



Castors x 4, Castor Pins x 4, Screws x 4


Items you should receive with your 'Castor Base' & Instruction Leaflet.

The castor base will add approximately 20mm to the height of the cabinet.




To tighten use a slotted screwdriver

The castor pins screw-in clockwise to fit.

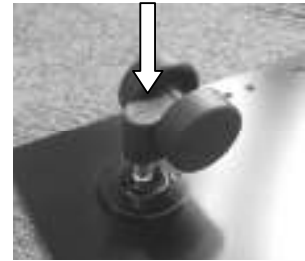

The castors push-fit onto the castor pins.

Lay castor base flat in the bottom of the cabinet, align the four slots over the screw holes.  
*(Empty the drawers and be careful whilst turning cabinet. Also remember to protect the top panel from damage)*

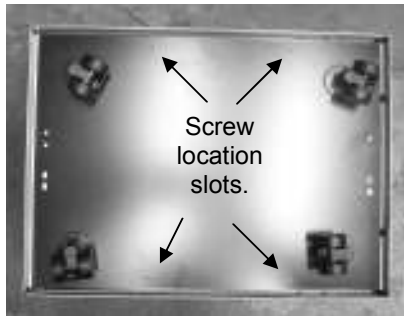

To tighten use a crosshead screwdriver.

Tighten screws using a crosshead screwdriver.

*(For A4 (CB2) & A3 (CB3) Multi-drawer Castor Base fittings see Guide 17)*  
Please beware sharp edges inside cabinet